

Test Sets



LAN ProNavigator Wire Map
Continuity Tester

PREMIER®

LAN ProNavigator™ Wire Map Continuity Tester

The LAN ProNavigator is a two-piece wire map continuity tester with a main unit and remote unit that show PASS/FAIL test results at both ends. It generates an oscillating audio tone for use with tone probes to locate cables. Tests UTP and STP data cables and 50 ohm and 75 ohm BNC coax cables.

Mfg. Part No.	Description
0000031693	PT-1543.1 LAN ProNavigator Wire Map Continuity Tester

Banjo Adapter



Banjo Adapter

PREMIER

PREMIER Modular In-Line (Banjo) Adapter

Banjo adapter for in-line testing of circuits with 4-wire, 6-wire, or 8-wire modular plugs.

Mfg. Part No.	Description
5516667501	PT-MTA-6 Banjo Adapter For In-Line Testing Of Circuits With 4-Wire Or 6-Wire Modular Plugs
5516677501	PT-MTA-8 Banjo Adapter For In-Line Testing Of Circuits With 8-Wire Modular Plugs

Bare Fiber Adapter



Bare Fiber Adapter and Launch Reel

PREMIER

PREMIER Launch Reel with Bare Fiber Adapter

- 122m (400ft) Singlemode Fiber
- Bare fiber adapter
- Zipper case w/ carabiner clip
- 1m SC Fiber jumper
- Cleaning wire kit
- Operation guide

Item No.	Mfg. Part No.	Description
0000202073	PT-BFA-KIT	Fiber Launch Reel, 122m (400ft) Singlemode Fiber, Operation Guide, Cleaning Wire Kit, 1m SC Fiber Jumper, Bare Fiber Adapter with Zipper Case with Carabiner Clip

600 New Century Parkway
New Century, Kansas 66031-8000
1.800.755.1950

www.dependonpremier.com